

OWNER'S MANUAL





OG Three

INTRODUCTION

Congratulations on your purchase of the OG Series of outdoor speakers. The OG Series speakers have been designed to provide excellent performance in all types of outdoor environments. To be sure that you optimize the performance of your OG Series speakers, please read this manual carefully.

CAUTION

Although they are designed to withstand the elements, there are precautions you should take to optimize the long-term performance of your speakers. Keep soil and wood chips from covering the speaker grille. If soil accumulates on the grille, it can be rinsed away with low water pressure. Chemicals commonly used in the yard can potentially damage parts of the speaker. Avoid spraying such chemicals onto or near the speaker. Also avoid placing the speakers where the grille area will come in direct contact with spray from sprinklers.

SPEAKER PLACEMENT

- If you desire music over a wide area, it is best to have a larger number of speakers playing at low volume, rather than a few speakers playing at high volume. Keep this in mind when designing your outdoor system.
- Ideally, you should place the speakers as close to the primary listening area as possible. The perceived volume of the speaker decreases rapidly as it is moved further from the listener.
- Direct burial wire or conduit for new yard construction must be run to the location of the speakers. Keep in mind that patios, walls and other features in your yard may be difficult to get around when wiring.

SPEAKER INSTALLATION

- Each OG Series has a two-conductor 16 AWG speaker wire exiting the bottom. This wire should be connected to a similar wire run that comes from your audio system.
- When attaching the wire to the OG Series speaker, it is critical that a high quality connection is achieved. A poor connection may lead to corrosion and a decline in or loss of performance. For best results, use the set of weatherproof wirenuts included with the speaker. Another option is to use a watertight direct burial box or crimp or solder the wires together and use a heat shrink tube to seal each connector.
- There are through holes on both the stake and speaker enclosure in case you choose to attach an anti-theft security harness. See Figure 1 and 5.
- The words "Speaker Faces This Way" are printed on the stake. This will tell you which direction your speaker will be facing when attached to the stake. See **Figure 1**.

Follow steps 1-4 and see Figure1-6 for detailed illustrations of the installation process.

- 1. Insert the stake into the ground by hand. See **Figure 1**. **NOTE:** To avoid damaging or braking the stake, DO NOT use a metal hammer or any hard object. If the soil is too hard to put in by hand, use your foot to continue inserting the stake into the ground. See **Figure 2**.
- 2. Attach the speaker wire to the wire run coming from your audio system (observing the proper polarity with your amplifier: + to + and to -.
- 3. Attach the OG series speaker to the stake using the security knob. Turn the security knob clock wise, but do not tighten it completely. See **Figure 3 and 4**.
- 4. Tilt the OG series speaker to the desired angle then continue turning the security knob until it is fully tightened. See Figure 5 and 6.



FIGURE 1

Security harness through holes

FIGURE 2

Speaker Faces This Way ——

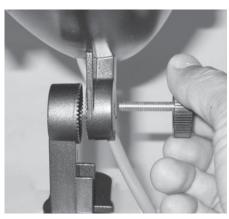


FIGURE 3

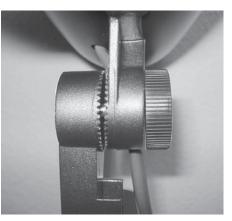


FIGURE 4



FIGURE 5 Security harness through hole

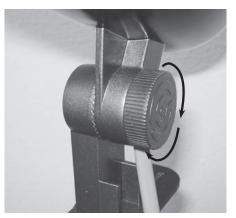


FIGURE 6

SPECIFICATIONS

	OG Three	Dimensions:
Speaker Type:	Outdoor Landscape Speaker	< 6 ⁷ ⁄₀" (176mm)
lweeter:	N/A	3 ¾" (95mm)
Woofer:	Sealed 3" Aluminum Cone Full-Range Driver	·
mpedance:	8 ohms	
Sensitivity:	88dB 1W/1m	
Frequency Response:	110Hz - 20kHz	6 %ս" (160mm)
Power Recommendation:	20 watts	<u>ع %،" (90mm)</u>

LIMITED LIFETIME WARRANTY

SpeakerCraft Inc. warrants to the original retail purchaser only that this SpeakerCraft product will be free from defects in materials and workmanship, provided the speaker was purchased from a SpeakerCraft Authorized Dealer.

Defective products must be shipped, together with proof of purchase, prepaid insured to the SpeakerCraft Authorized Dealer from whom they were purchased, or to the SpeakerCraft factory at the address listed on this installation instruction manual. Freight collect shipments will be refused. It is preferable to ship this product in the original shipping container to lessen the chance of transit damage. In any case, the risk or loss or damage in transit is to be borne by the purchaser. If upon examination at the Factory or SpeakerCraft Authorized Dealer it is determined that the unit was defective in materials or workmanship at any time during this warranty period, SpeakerCraft or the SpeakerCraft Authorized Dealer will, at its option, repair or replace this product at no additional charge, except as set forth below. If this model is no longer available and can not be repaired effectively, SpeakerCraft, at its sole option may replace the unit with a current model of equal or greater value. In some cases where a new model is substituted, a modification to the mounting surface may be required. If mounting surface modification. All replaced parts and product become the property of SpeakerCraft Inc. Products replaced or repaired under this warranty will be returned to the original retail purchaser, within a reasonable time, freight prepaid.

This warranty does not include service or parts to repair damage caused by accident, disaster, misuse, abuse, negligence, inadequate packing or shipping procedures, commercial use, voltage inputs in excess of the rated maximum of the unit, or service, repair or modification of the product which has not been authorized or approved by SpeakerCraft. This warranty also excludes normal cosmetic deterioration caused by environmental conditions. This warranty will be void if the Serial number on the product has been removed, tampered with or defaced.

This warranty is in lieu of all other expressed warranties. If the product is defective in materials or workmanship as warranted above, the purchaser's sole remedy shall be repair or replacement as provided above. In no event will SpeakerCraft be liable for any incidental or consequential damages arising out of the use or inability to use the product, even if SpeakerCraft Inc. or a SpeakerCraft Inc. Authorized Dealer has been advised of the possibility of such damages, or for any claim by any other party. Some states do not allow the exclusion or limitation of consequential damages, so the above limitation and exclusion may not apply.



All implied warranties on the product are limited to the duration of this expressed warranty. Some states do not allow limitation on the length of an implied Warranty. If the original retail purchaser resides in such a state, this limitation does not apply.

SpeakerCraft offers a variety of accessories to make your installation of this and other SpeakerCraft products easy, economical, and professional. Contact your authorized SpeakerCraft Dealer for more information. For technical inquires, please call 1-800-448-0976 or e-mail us at techsupport@speakercraft.com. We are available to assist you every weekday, except holidays, between the hours of 7:00 a.m. and 5:00 p.m. PST.





940 Columbia Avenue, Riverside, CA 92507 | USA (800) 448 0976 Fax (951) 787 8747 International +1 951 787 0543 | www.speakercraft.com